Suitalbe for HP 1280

1. Product Accessories:

a、CISS	1 set
b、Air Filter	4 pcs
c、Support Arm	2 sets
d、Rubber Plugs	2 pcs
e. Syringe	4 pcs
f、CD instruction	1 pc
g、HP Refill Tool	1 set





2. Installation Procedure

Step 1:



Put the CISS beside the printer. Make the printer and ink tank on the same level.



Pull the rubber plug out of the Air hole.



Then insert the air filter.

Step 2:



Turn on the power.




Open the cap, and then take out the original cartridges.



Open the printer top cover.



Put the CISS cartridge inside the carriage.

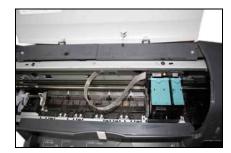

The cartridge carriage will move out.



Re-cover the cap tightly.

Step 3.



The support arm in the picture is already on the cartridge during production.



Stick the other short support arm in the middle of the groove part.



Stick the long support arm with a distance of 3.5cm from the right side, and 10cm from the bottom.







Fix the tube on those support arms with clip. Make sure that the tube is not twisted.

Step 4.



Take out the power cord of the Printer and then the cartridge Carriage can move.



Move the carriage to the leftmost.



Make the tube as straight as possible. The tube can not be excessively long or twisted.



Move the carriage leftward and rightward. Make sure the tube length is OK. Then the installation is finished.

3. Test and Maintenance:







Connect the Power Cord.

Turn on the power.

During using, pls keep the printer top cover opened. Insert the roll into the hole as in the picture.

4. Proble Handling Procedures:

Clean the printer head, and print pages for test. Broken lines may be caused by air in the nozzles. If after cleaning the printer head repeatedly, there are still broken lines, especially single color, then pls deal with this matter as below (take the tri-color cartridge as example):




When there is air inside the Tube and cleaning printer head does not help at all.




Cover the cartridge inside the HP refill tool as in the picture.



Inverse the cartridge, and make sure that the bottom hole is upward.

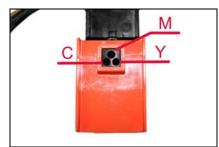

In the picture, the hole in top is Magenta, the left one is Cyan, and the right one is Yellow.

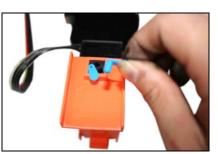


When you are going to vacuum certain color, pls cover the other 2 holes first.



Insert the syring into the opened hole.




Draw the plunger upward.

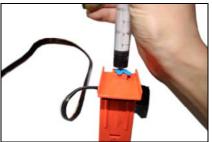

Draw it until there is ink inside syringe.




Vacuum the air of the other colors in the same way. After that, there will be no air inside the tube.

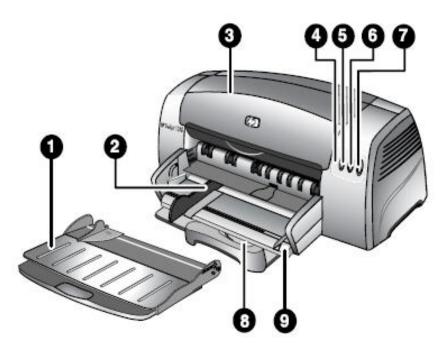

When the printer reminds that the cartridge should be changed, then you need to reset the printer. Press No. 6 button until the light stops flashing. Then the printer is reset.

6. Refill Procedure:

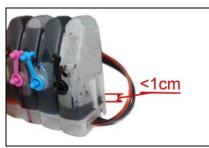

Take notice of the remaining ink inside the ink tank. If the ink is less than 1 cm from the bottom line, then pls refill ink in time.



Pull the rubber plugs out of ink filling hole carefully.



Refill ink according to the color. After that, then pls recover the rubber plugs.

Notice: During this process, pls keep the printer and ink tank on the same level.

Attention for maintenance:

If the printer needs maintenance, pls take out the CISS including the inner cartridges and other components. Then remove support arm from printer. Then place the original cartridges in. Please inquire local dealer before sending to maintenance.

Notice:

- 1. Please don't take out cartridge at random after installing the CIS system. Keep the reservoir bottles on the same level with the printer.
- 2. Try to keep at least 1/2 inch of ink in the bottles, as you don't want to run out of ink and draw air into the cartridge.
- 3. Don't place the Reservoir Bottles higher or lower much than the printer.
- 4. To be used in a dry place between 15 and 35 degree. Avoid exposure to direct sunlight.
- 5. Don't put the continuous ink supply systems reversed or leaning during the shipment. Please make sure all the ink filling holes and Ventilation holes are closed tightly during the transportation. Otherwise, the ink shall leak out.
- 6. Don't sway the cartridge frequently. It may cause ink leakage.
- 7. Don't pull out the connector of cartridge and don't tear off adhesive tape at the bottom of cartridge.

Warning:

- 1. Not drinkable; keep it out reach of children.
- 2. Avoid exposure to direct sunshine and don't keep it in high or freezing temperature.
- 3. Avoid collision and fallen down.